




Where Adventures Begin™

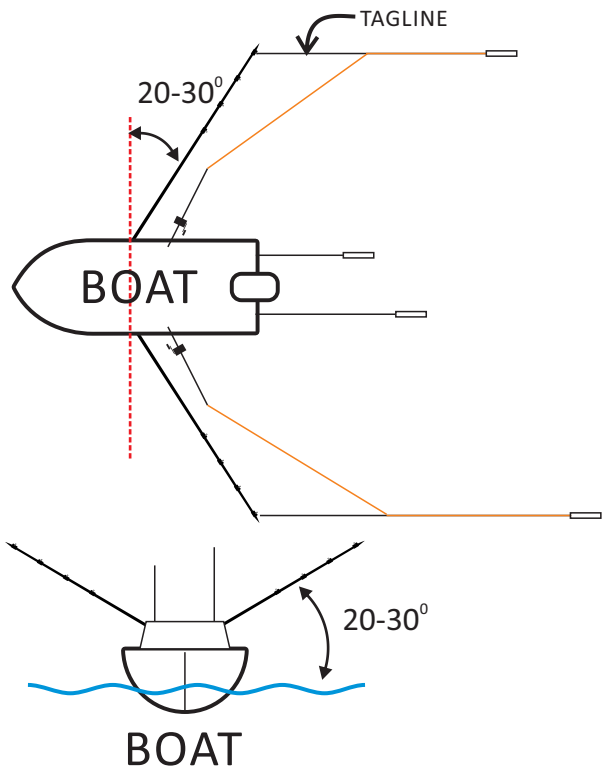

**Note;** Adjust the rubber snubber just enough so that the polyprop cord remains tight when the lure is deployed, but **DO NOT** over tighten as you may cause damage to your rig.

**NOTE:** Mount your bases as high as you can as a high rigger will improve the action of most lures but make sure you can comfortably reach bases to change position of outriggers

POSITION OF POLES WHEN UNDERWAY

KILWELL OUTRIGGER BASE

POLYPROP CORD 3.5mm 600lb

AFTCO ROLLER TROLLER

CENTRO T/SNAP 450lb SWIVEL

SHOGUN MONO 425lb. TAG LINE SAME LENGTH AS POLES

TIPS OF OUTRIGGERS TO LINE UP WITH BOAT TRANSOM

KILWELL S/S TAG RETURN WEIGHT

CENTRO T/SNAP 450lb SWIVEL TO HOLD SIZE 32 RUBBER BAND

KILWELL RUBBER SNUBBER

EVA STOPPER

S/S CLEAT FIXED TO BOAT

TEAM KILWELL

# SETTING UP KILWELL STIFFY OUTRIGGERS

